



Using a flat head screwdriver remove the terminal cover from the base housing to expose the terminal strip where the blower terminals will land.

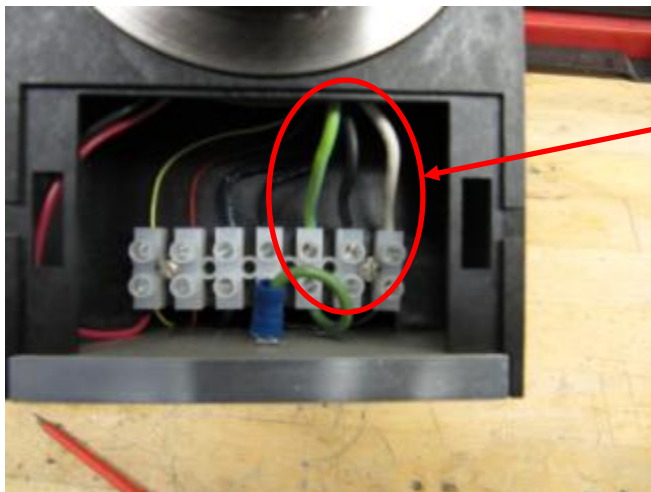
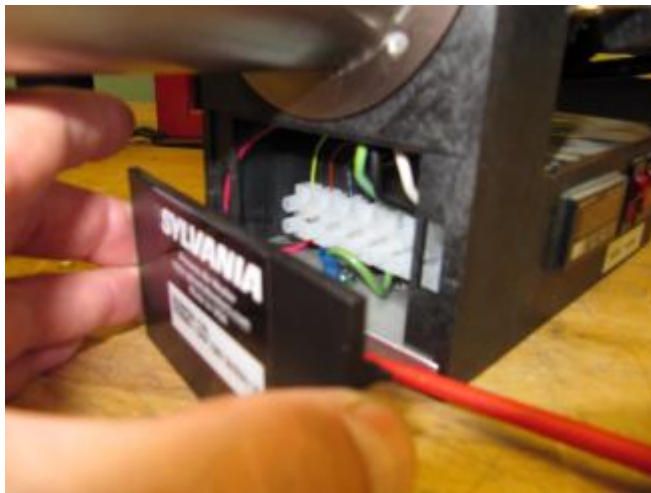


Photo shown is with our standard blower. The blower leads are the green (ground), black (hot), and white (neutral) on the right most top terminals. Simply wire to these same terminals using the leads from the external blower and the blower switch on the Skorpion unit will power the external blower. With this setup the heater coil cannot be energized without the blower being turned on first.